



After Sales Service Email: info@cloudnewenergy.com


48(51.2)V LiFePO4
 **105 Ah**

Golf Cart Battery



Please Read The Manual Carefully Before Using The Equipment.

Cloudenergy 51.2V 105Ah LiFePO4 Battery Deep Cycle Rechargeable Battery for Golf Cart

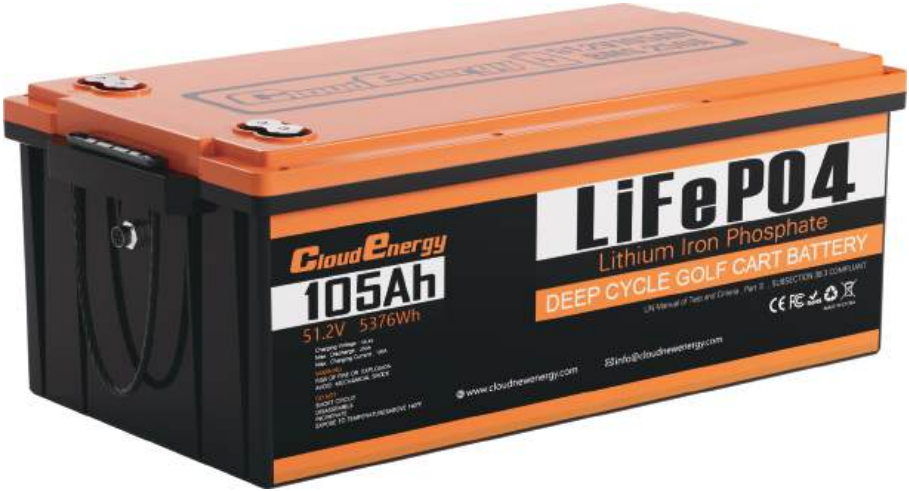

X2

51.2V 105Ah Golf Cart Battery



**Cloudenergy 5376Wh LiFePO4 Battery
Perfect For Golf Carts**

Home Energy Storage System



**Cloudenergy 5376Wh LiFePO4 Battery
Large Capacity Convenient & Practical**

Introduction

TWO TERMINAL



LCD SCREEN



CARRYING ROPE

PRODUCT OVERVIEW

BATTERY

Combination: 48V 105Ah

Case Color: Orange+Black

Dimension: L547* W288*H203mm/21.54*11.34*7.99inch



42Kg/92.59 lb


Terminal & Post Bolts

Terminal Size:

M8(1.25mm Metric Thread)

Post Bolts:

M8 (1.25mm Metric Thread*14mm Bolt Length)

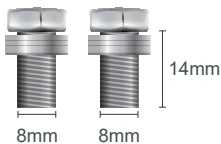

(The bolts can be replaced with M8 bolts of other lengths based on actual needs.)

Equipped With Charger And LCD Display

The Cloudeenergy golf cart battery package includes a 58.4V 20A charger and a display that allows you to check the status of the battery in real time!



LCD Screen

GENERAL INFORMATION

Operating Voltage	51.2V
Charging Voltage	58.4±0.75V
Max Continuous Load Power	5120W
Max Continuous Charging/Discharge Current	100A/250A


NOTICE BEFORE USING

STEP
1

CONTACT US at info@cloudnewenergy.com to activate the FIVE-YEAR WARRANTY

STEP
2

PULL OUT Packaging box.

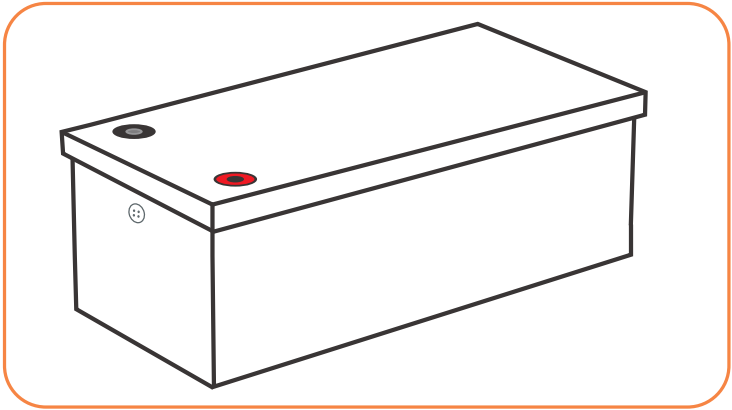


STEP
3

TEST The Battery Voltage with Multimeter

≥48V To Step 4


<48V Contact us at info@cloudnewenergy.com to help solve the problem.

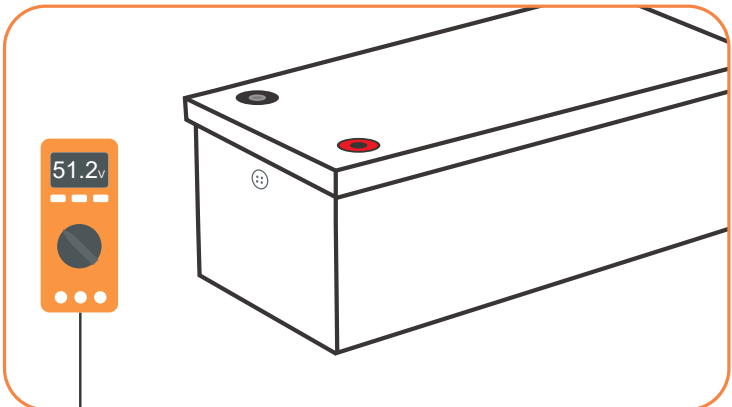

STEP
4


FULLY CHARGE The Battery Separately

Refer to Page 04 for battery charging methods

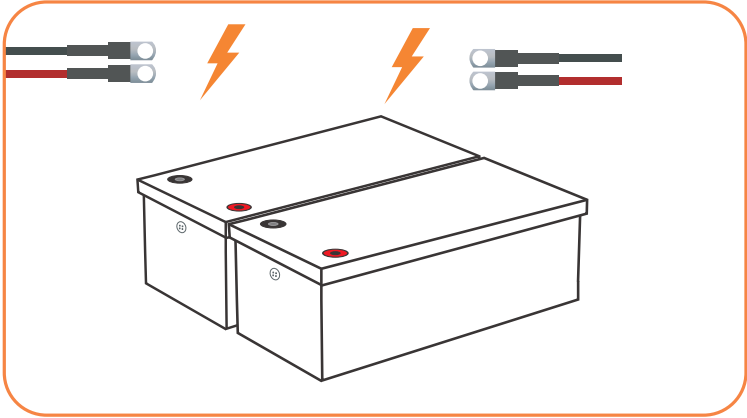

STEP
5


CONNECT To Use

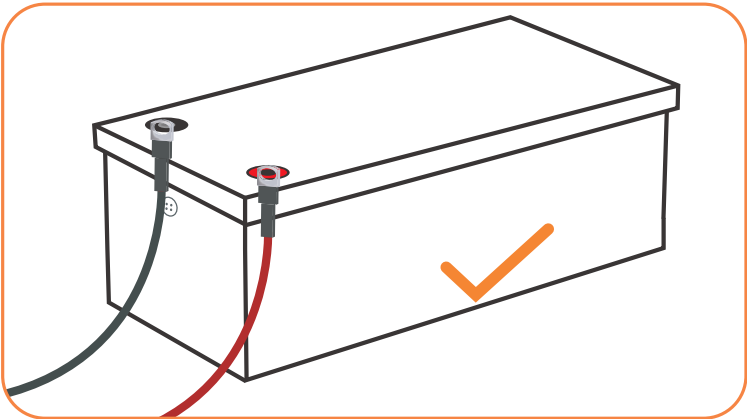

STEP
6

CONNECT THE LCD DISPLAY To Check Battery Status

The battery status can be checked in real time by connecting the display with the equipped RS485 cable.

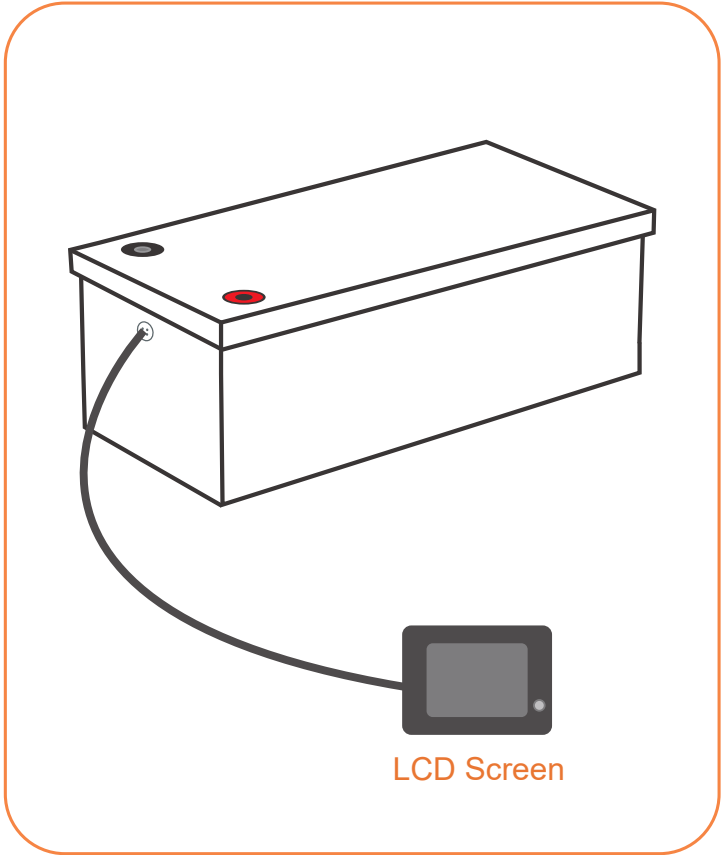

HOW TO INSTALL BLUETOOTH FUNCTION

If there is a need you can contact our after-sales service email: info@cloudnewenergy.com

Download applications by scanning code on your phone, or in the application market, search for [xiaoxiangdiandong](#).



After connecting to the battery, you can check the battery information





CONTENTS

BATTERY PARAMETERS	page
	01

THINGS TO KNOW BEFORE USING	page
	03
Long Term Storage	03

CHARGING METHODS	page
	04

Background Information	The Voltage When Charging & Discharging	04
	Battery Charging Logic	05
	LiFePO4 Battery Charging Mode	
	Lead Acid Battery Charging Mode	
Method I	Solar Panel(s) & Controller	07
	Solar Panel	
	Controller	
	Controller Settings	
Method II	Battery Charger	08
Method III	Alternator / Generator	08

HOW TO ESTIMATE THE BATTERY CAPACITY	page
	09
State of Charge (SOC)	09

PARALLEL CONNECTION	page
	10
The Premise of Connection	10
Limitation for Series/Parallel Connection	10
How to Connect Batteries	11
Step 1 Wear Insulating Gloves	
Step 2 Voltage Balancing Before Connection	
Step 3 Total Input & Output Connection	
Step 4 Rebalancing Every Six Months	

INVERTER SETTINGS	page
	17

WHAT TO DO WHEN THE BATTERY STOPS WORKING?	page
	18

BATTERY-PACK MAIN PARAMETERS


Cell	Prismatic LiFePO4 Battery
Nominal Capacity	105Ah
Usable Capacity	105Ah
Nominal Voltage	51.2V
Energy	5376Wh
Charge Method	CC/CV
Charge Voltage	58.4V±0.75V
Max. Charge Current	100A

Battery Management System (BMS) Board	250A
Max. Continuous Charge / Discharge Current ^①	100A/250A
Max. Discharge Current 1 Seconds	400A
Max. Continuous Load Power ^②	12.8KW

① The maximum continuous current that the battery can withstand.

② The maximum continuous output power that the battery can support.


Internal Impedance	≤40mΩ
Battery Pack Case	Steel Plate Cold Common (SPCC)
Dimension	L21.54*W11.34*H7.99inch
	L547*W288*H203 mm
Temperature Range	Charge: 0°C to 50°C / 32°F to 122°F
	Discharge: -20°C to 60°C / -4°F to 140°F
	Storage: -10°C to 50°C / 14°F to 122°F

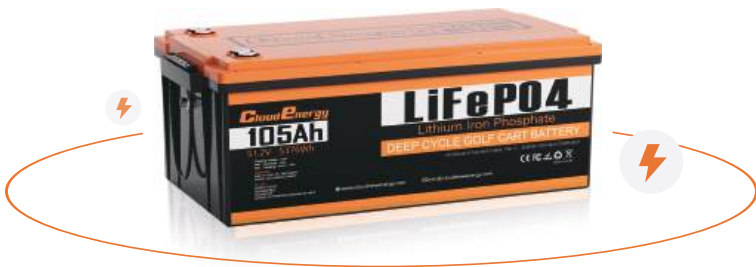

THINGS TO KNOW BEFORE USING

Please take care to avoid metal or conductive objects touching the positive and negative terminals of the battery at the same time during your operation, otherwise it is likely to cause a short circuit.

DO NOT install the battery sideways or with the top down. If you are not sure about the installation direction, please contact us to confirm the direction.

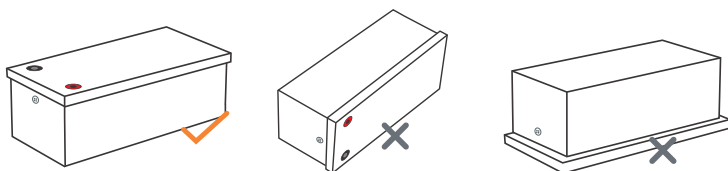

Tightly screw in the post bolts. Having loose battery terminals will cause the terminals to build up heat resulting in damage to the battery.

This battery is not intended to be used to start any devices, please **DO NOT** use it as a starting battery.


Suggestions for Long-term Storage:

○ Temperature

The battery can be operated at a temperature of -20°C to 60°C / -4°F to 140°F , and a temperature between **10°C to 35°C / 50°F to 95°F** is ideal for long-term storage. Store in a fireproof container and away from children.

○ Capacity

For a longer-lasting product, it is best to store your battery **at a 50% charge level** and recharge every three months if it is not going to be used for a long time.

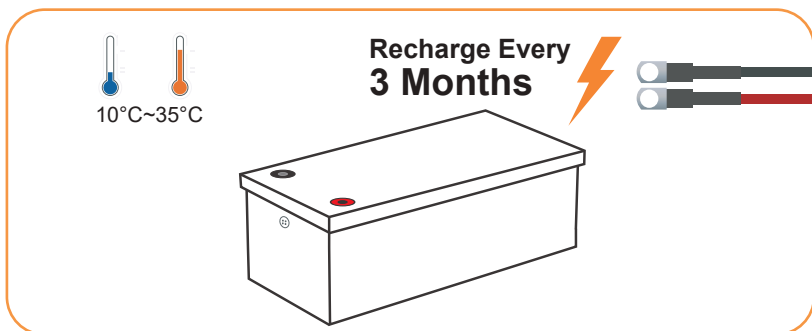


CHARGING METHODS

THE VOLTAGE WHEN CHARGING & DISCHARGING

Based on the characteristics of Lithium Iron Phosphate (LiFePO₄) batteries, the voltage measured by all LiFePO₄ batteries during charging/discharging is not the real voltage of the battery. Therefore, after charging/discharging and disconnecting the battery from the power source, the voltage of the battery will gradually drop/increase to its real voltage.

If you need to test the real voltage of the battery, please disconnect all the connections to the battery and test its voltage after putting it aside for over 30 mins.

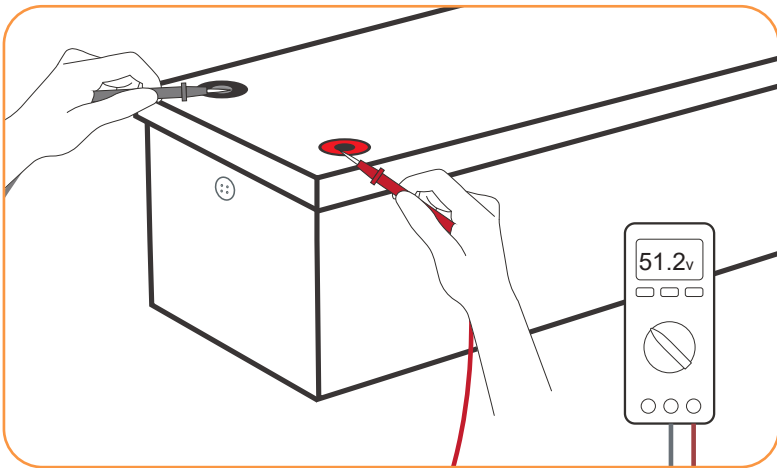

Tips When Testing The Battery Voltage by A Multimeter


- ① Put the red probe (+) tightly on the tightly screwed positive post bolt, and the black probe (-) on the tightly screwed negative post bolt.
- ② Do not touch the metal part of the probes with your hands during use.

BATTERY CHARGING LOGIC

The material characteristics of the LiFePO₄ battery determine that its charging curve is obviously different from that of a lead-acid battery. Compared with a lead-acid battery, the LiFePO₄ battery has a simpler charging process and mode. Therefore, it is recommended to select LiFePO₄ for your charging mode.

If LiFePO₄ mode is not available, please refer to the recommended parameters on Page 07~08 for setting.

LiFePO₄ Battery Charging Mode

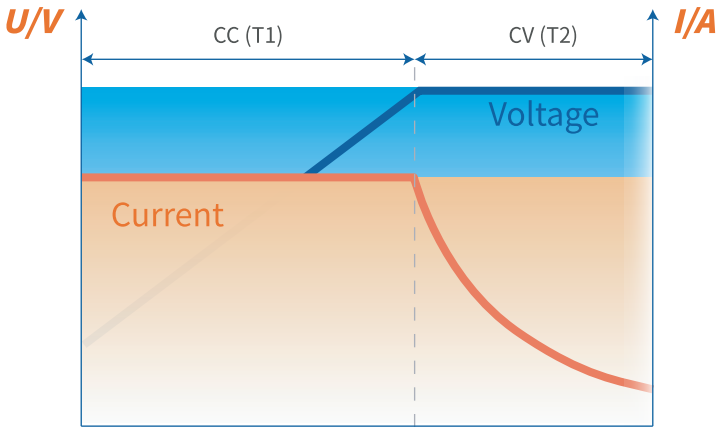

LiFePO₄ Battery Charging Curve

○ CC (Constant Current) Phase(T1)


In the beginning, a discharged battery will be charged with a constant current and voltage will be climbing steadily until reaching the constant voltage setpoint which varies for different charging methods.

○ CV(Constant Voltage) Phase(T2)

The battery maintains a constant voltage during this phase while the current gradually decreases to 2A (0.02C) which is also known as tail current^①. At this point, the charging is cut off and the battery is fully charged.

① Tail Current(A)= Battery Capacity*0.02C.E.g., 100Ah*0.02C= 2A tail current.

I Lead Acid Battery Charging Mode

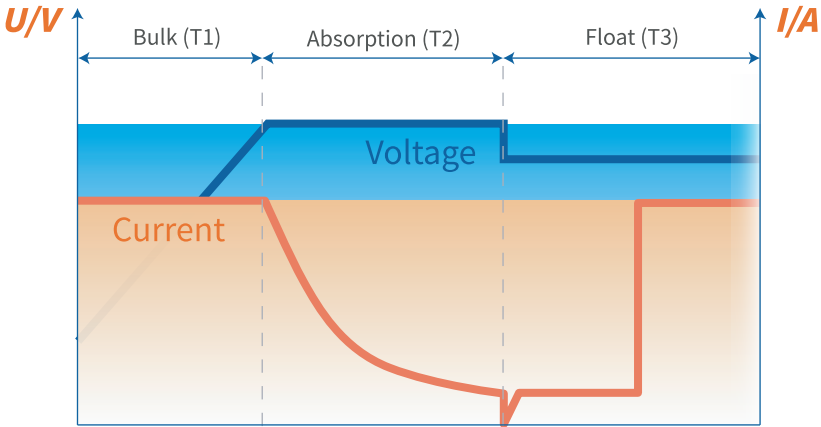

Lead Acid Battery Charging Curve

○ Bulk/ Boost Phase(T1)

In the beginning, a discharged battery will be charged with maximum current and voltage will be climbing steadily until reaching the absorption voltage setpoint.

(This phase is basically equivalent to the CC phase of LiFePO₄ battery charging.)

○ Absorption Phase(T2)

The battery reaches the absorption voltage setpoint and holds the voltage constant while the current gradually decreases until the battery is becoming full (within 10-20%). Generally, absorption will not exceed 3 hours to prevent overcharging.

(This phase is basically equivalent to the CV phase of LiFePO₄ battery charging.)

○ Float Phase (T3)

After the absorption stage, the voltage of the battery will reduce to the float voltage setpoint and the current will also reduce to a low maintenance mode to prevent the battery from discharging and offsetting any self-discharge. Heavier battery discharge may set the controller back to Bulk/Boost or Absorption to replenish energy lost while energy is available.

(LiFePO₄ battery does not have this charging phase.)

SOLAR PANEL(S) & CONTROLLER

Solar Panel

☆ Recommend Power: ≥1200W

- The battery can be fully charged in one day (with effective sunshine 4.5hrs/day) by 1200W solar panels.
- It may take more than one day to fully charge the battery by 1200W solar panels since the duration and intensity of light would be a great factor for their charging efficiency.

Controller

☆ Recommend Charging Current:

20A(0.2C)	The battery will be fully charged in around 5hrs to 100% capacity.
50A(0.5C)	The battery will be fully charged in around 2hrs to around 97% capacity.

☆ Recommend Charging Mode: 51.2(58.4V) 20Ah (LiFePO4)

Controller Settings

Refer to the below parameters if you need to manually set up your controller. As different types of batteries have different charging modes (refer to Page 04-05), it is recommended to set only the following parameters for LiFePO4 batteries. The settings for other types of batteries do not apply to LiFePO4 batteries except for the following settings.

CHARGING	Charge /Bulk /Boost Voltage	58.2V/58.4V
	Absorption Voltage	58.2V/58.4V
	Over Voltage Disconnect	59.2V
	Over Voltage Reconnect	54.4V
	Tail Current	2A(0.02C)
DISCHARGING	Under Voltage Warning	46.4V
	Under Voltage Recover	48V
	Low Voltage Disconnect	43.2V
	Low Voltage Reconnect	49.6V

BATTERY CHARGER

Use 58.4V lithium iron phosphate (LiFePO₄) battery charger to maximize the capacity.


☆ Recommend Charging Voltage: **Between 58.2V to 58.4V**

☆ Recommend Charging Current:

20A(0.2C)	The battery will be fully charged in around 5hrs to 100% capacity.
50A(0.5C)	The battery will be fully charged in around 2hrs to around 97% capacity.

Tips

- ① Connect the charger to the battery before connecting it to the grid power in case of sparks.
- ② It's recommended to disconnect the charger from the battery after fully charging.

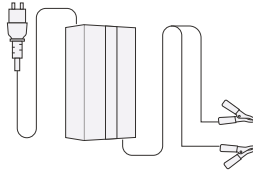

ALTERNATOR/ GENERATOR


Cloudenergy battery can be charged by an alternator or generator.

If the alternator/generator supports DC output, a DC-to-DC charger needs to be added between the battery and the generator; if the alternator/generator supports AC output, please refer to the recommendations in "Battery Charger" above to add a suitable battery charger between the battery and the generator.

☆ Recommend Charging Voltage: **Between 58.0V to 58.0V**

☆ Recommend Charging Current:

20A(0.2C)	The battery will be fully charged in around 5hrs to 100% capacity.
50A(0.5C)	The battery will be fully charged in around 2hrs to around 97% capacity.

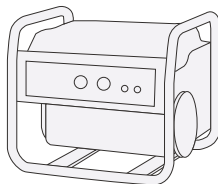

HOW TO ESTIMATE THE BATTERY CAPACITY

STATE OF CHARGE (SOC)

The battery capacity could be roughly estimated by its rest voltage (not charging/discharging voltage). As there are subtle differences in the voltage of each battery, the below parameters are for reference only.

Rest Voltage: The voltage needs to be tested at rest (with zero current) after 30 mins of disconnecting from the charger & loads.

CAPACITY	CHARGE VOLTAGE
100%	53.8V
99%	53V
90%	52.5V
70%	52V
40%	51V
30%	50V
20%	49V
10%	47V
1%	43V (recommend low voltage disconnect voltage)
0%	42V

PARALLEL CONNECTION


THE PREMISE OF CONNECTION

To connect in parallel, batteries should meet the below conditions:

- identical batteries with the same battery capacity (Ah) and BMS (A);
- from the same brand (as lithium battery from different brands has their special BMS);
- purchased in near time (within one month).

LIMITATION FOR SERIES/PARALLEL CONNECTION


Support connecting up to 16 identical batteries in parallel for up to: 51.2V 420Ah battery system.

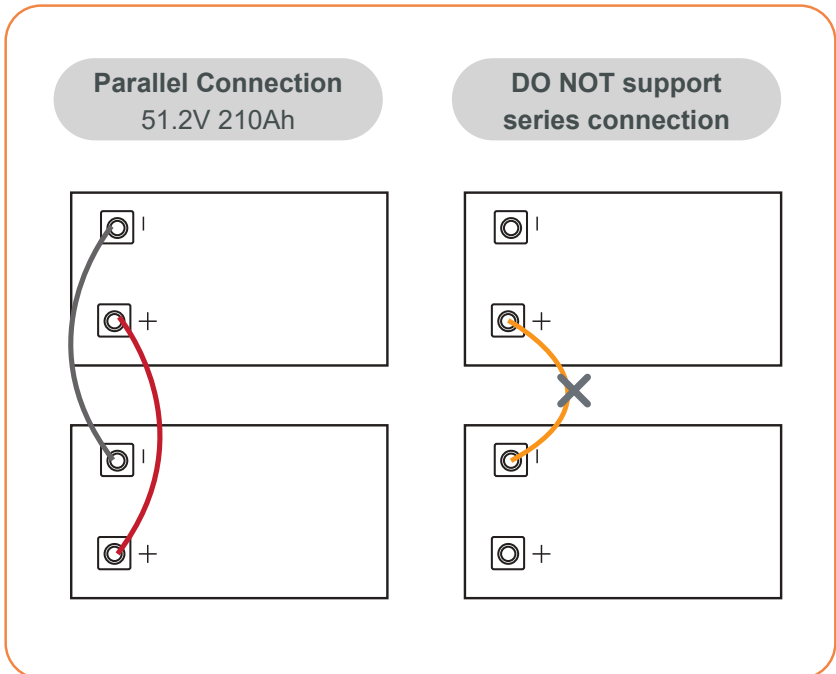

HOW TO CONNECT BATTERIES

Step1 Wear Insulating Gloves

Wear Insulating Gloves for protection before connecting. Please pay attention to operation safety in the process of connection.

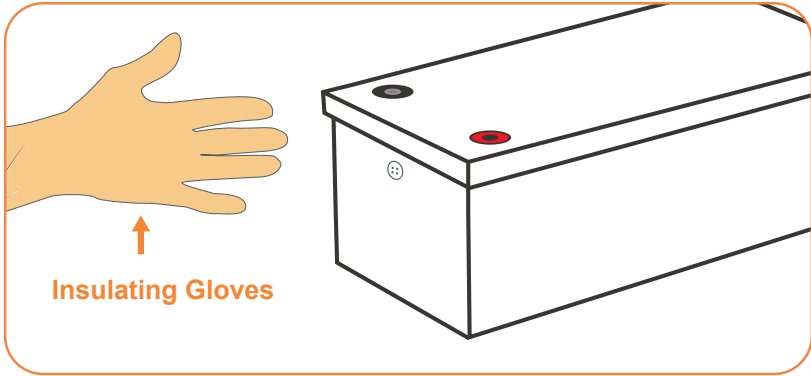


Step2 Voltage Balancing Before Connection

Below two steps are necessary to reduce the voltage difference between batteries and let the battery system perform the best of it in parallel.

STEP
1


Fully charge the batteries separately.
(voltage at rest: $\geq 53.8\text{V}$)

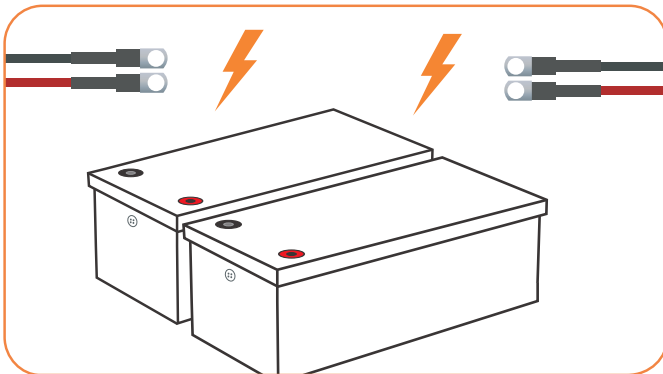

STEP
2

Connect the batteries one by one **in parallel**, and leave them together for **12~24hrs**. After the battery voltages have been balanced, the paralleled battery system can be connected to the load referring to Step 3 on Page 13.

Connect Batteries in Parallel **+** to **+** **-** to **-**

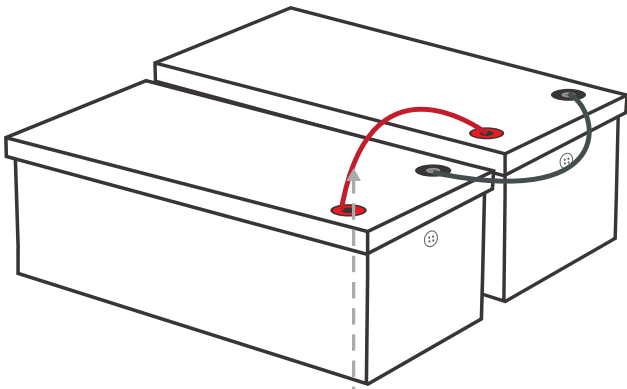

Recommend Battery-to-Battery Connection Cable:
6AWG Copper Cable.


After parallel connection, the capacity of the battery system will be doubled according to the number of batteries you connect.

Step3 Total Input & Output Connection

Adding two copper bars^① to connect the paralleled system to the load.


STEP
1

Connect all the positive output cables of the batteries to one copper bar.

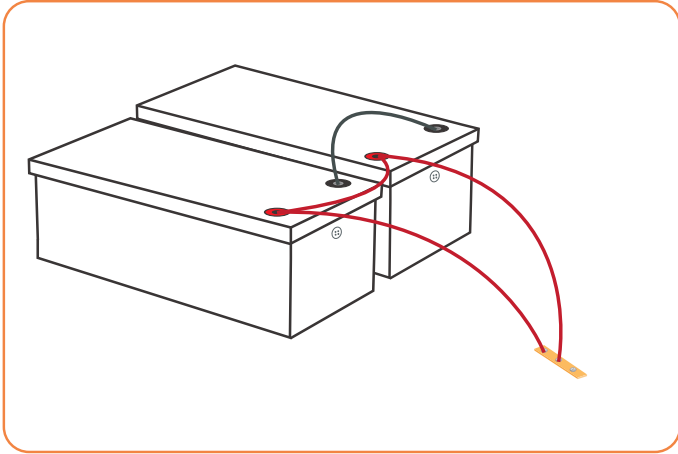


STEP
2

Connect the **+** of the load to the copper bar. The cable gauge used in this step should be able to support the total input & output current of the entire battery system.

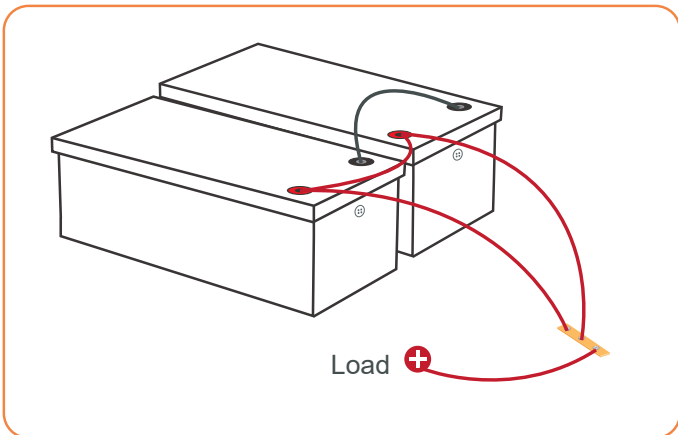

STEP
3


The **-** of the battery system and load are also connected to another copper bar following the above steps.

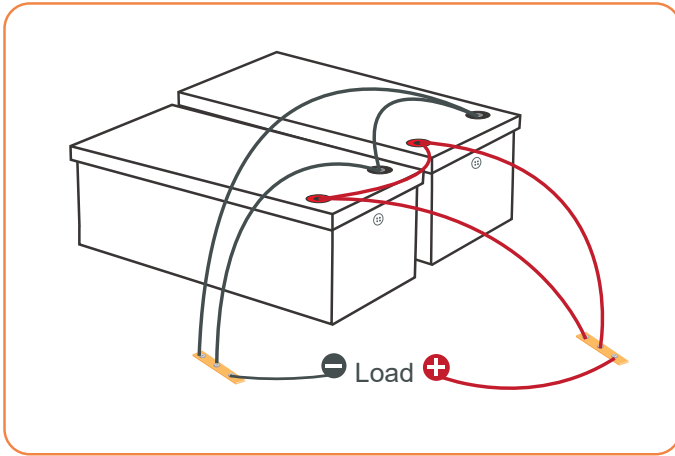


- ① Copper Bar: Flat metal made of copper. It can help ensure the input & output currents of each battery are balanced
Copper is recommended as it has better conductivity, and the conversion efficiency of the input & output currents for the battery will be higher.

Step 4 Rebalancing Every 6 Months

It is recommended to rebalance the battery voltage every six months following Step 2 on Page 11 if you're connecting multiple batteries as a battery system, as there might be voltage differences after six months of the battery system running.

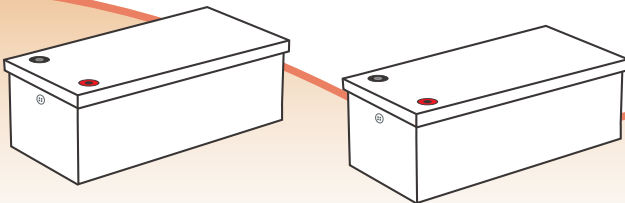


51.2V 105Ah Battery Used For Golf Carts

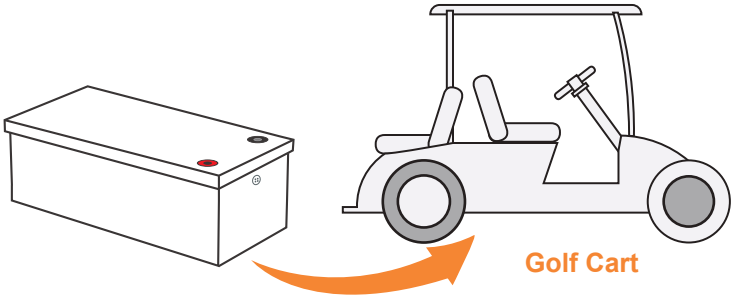

Also Suitable For Other Low-speed Vehicles

48V 210Ah Battery System:

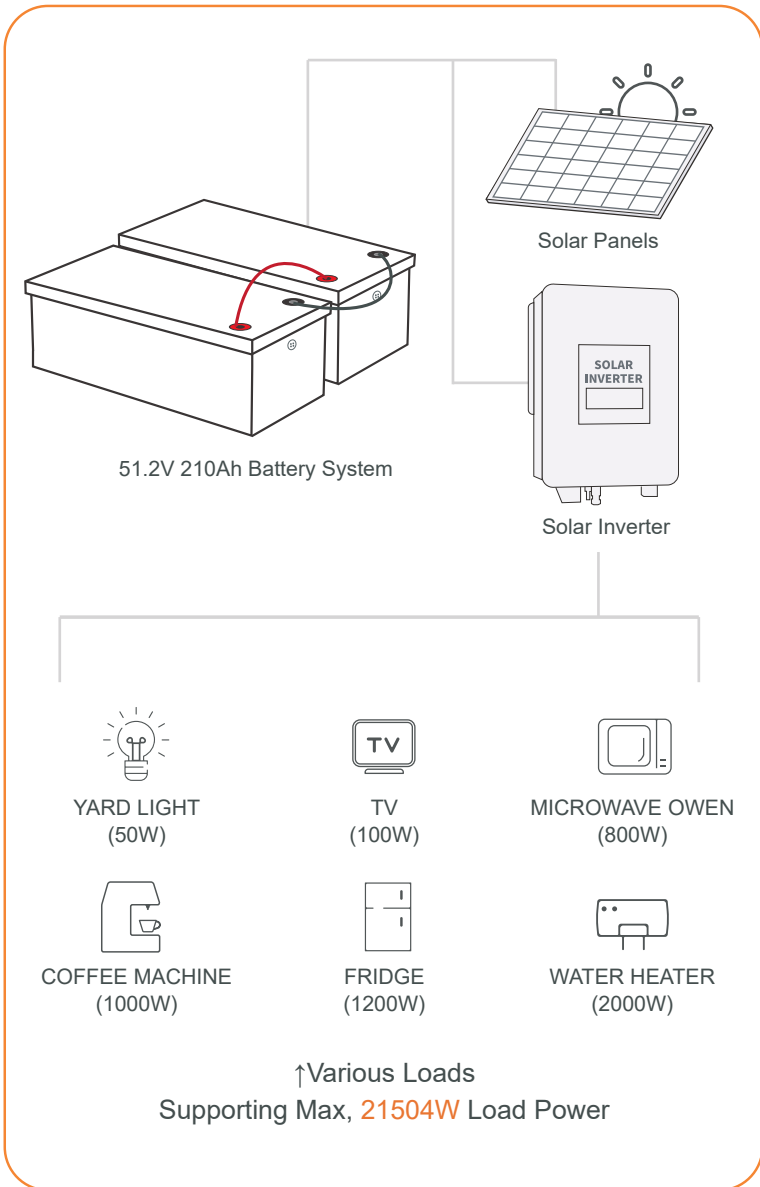

INVERTER SETTINGS

METHOD ONE (RECOMMEND)

Select “51.2(58.4V) LI (LiFePO4) Mode”


METHOD TWO

If method one is not available, select “User Mode” to enter values according to below parameters.

CHARGING	Charge Voltage	58.4V
	Over Voltage Disconnect	59.2V
	Over Voltage Reconnect	54.4V
DISCHARGING	Under Voltage Warning	46.4V
	Under Voltage Recover	48V
	Low Voltage Disconnect	43.2V
	Low Voltage Reconnect	49.6V


The above setting parameters apply to common inverters on the market (such as Victron, Renogy, Growatt, Xantrex, Go Power, Lux Power, etc.). Different brands have slightly different descriptions or naming methods for each parameter. Please directly set the parameters with the same meaning.

If the inverter parameters to be set are special or cannot correspond to one of the above items, please contact info@cloudnewenergy.com for confirmation.

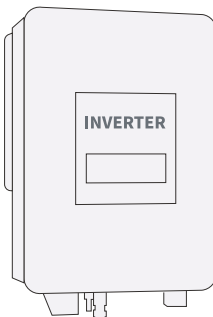

WHAT TO DO WHEN THE BATTERY STOPS WORKING?

When the battery




It has 85% chances that BMS has shut it off for protection, and you could try one of below ways to activate the battery.

GENERAL STEPS

If the BMS has cut off the battery for protection, follow the below steps to activate it.

STEP 1


Cut off all the connections from the battery

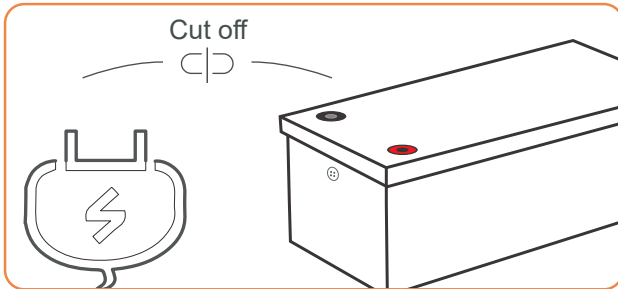


STEP 2

Leave the battery aside for 30mins

Then the battery will automatically recover itself to normal voltage (> 30 V) and can be used after fully charged.

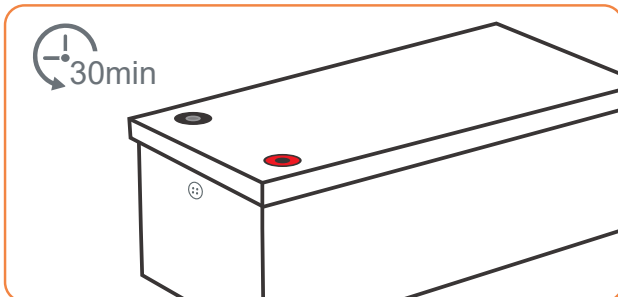

If the battery is unable to recover itself after the above steps, please try, activating by **USING A CHARGER WITH A 0V CHARGING FUNCTION**^① **TO FULLY CHARGE THE BATTERY.**

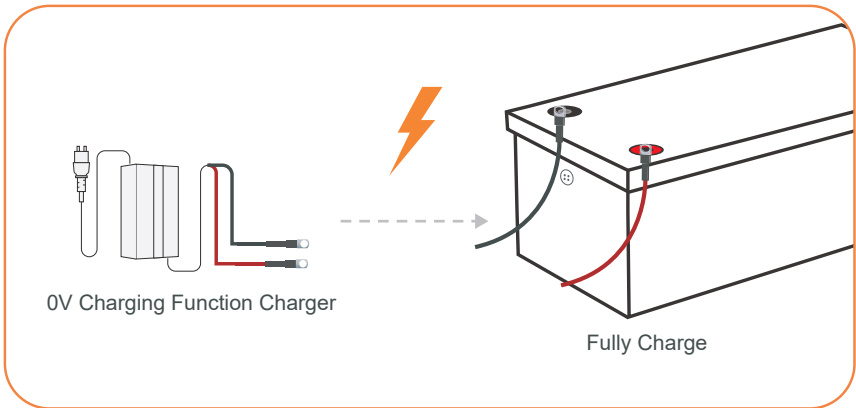

①The charger can charge the battery starting from 0V.

After activated (voltage >30V) and fully charged by the normal charging method, it can be used normally.

ATTENTION

Caution: Risk of Fire, Explosion or Burns
DO NOT Short circuit
DO NOT Reverse connections from the charger to the battery
DO NOT Disassemble
DO NOT Throw into fire or incinerate
DO NOT Heat above 70°C / 158°F

WARNING

BATTERY DISPOSAL

The electrodes of the waste battery should be wrapped with insulating paper to prevent fire and explosion.

PROHIBITION OF DISASSEMBLY

Never disassemble the cells.

The disassembling may generate an internal short circuit in the cell, which may cause gassing, firing, explosion, or other problems.

The electrolyte is harmful.

Li-Fe battery should not have liquid from electrolyte flowing, but in case the electrolyte comes into contact with the skin, or eyes, physicians shall slush the electrolyte immediately with fresh water and medical advice is to be sought.

PROHIBITION OF DUMPING OF CELLS INTO WATER

Do not soak the battery in which the liquid, like water, seawater and non-alcoholic drinks, fruit juice, coffee or other drinks.


PROHIBITION OF DISASSEMBLY

If any abnormal features of the cells are found such as damages in a plastic envelope of the cell, deformation of the cell package, smelling of an electrolyte, anelectrolyte leakage and others, the cells shall never be used anymore.

The cells with a smell of the electrolyte or a leakage shall be placed away from the fire to avoid firing or explosion.

PROHIBITION OF USING IN BELOW PLACES

Do not use the battery in a place with strong static electricity and a strong magnetic field, otherwise, it is easy to damage the battery safety protection device and bring hidden danger.

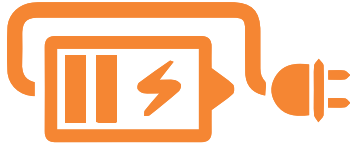

USER MANUAL OF ACCESSORY

DISPLAY OF LCD SCREEN FUNCTION	page
	01
INSTALLATION METHOD OF PORT PLUG	page
	02
MRP CHARGER PRODUCT USER	page
	03

DISPLAY OF LCD SCREEN FUNCTION

The battery comes with a 2.8-inch touch screen. You can view battery information in real time on the LCD.

(The following contents and data are schematic diagrams, the specific data is subject to the display)



86% Capacity/SOC	43 A Charge / Discharge Current
53.6V Total Voltage	92.1°F Temperature
999H-48M Charging Full/Discharge Empty Time	



DSG Discharge State	CHG Charge State
105AH Surplus Capacity	0000 Cycle Index Counter
77.2°F/68.4°F Temperature	NOMAL Protection State



1~4 Voltage of each cell

INSTALLATION METHOD OF PORT PLUG

This is an ac port plug, power inlet, and waterproof electrical outlet with a 16-inch integrated outdoor extension cord that offers optimal flexibility and ease of installation. It works with any extension cord and requires no cable modifications or hand wiring. Its sleek, ultra-low-profile design not only works seamlessly on any application but includes a pressure-fit cap for a watertight seal. And it makes onboard battery charging ports, engine block heaters, or outdoor electrical outlets more accessible than ever before - giving you endless possibilities. Rated at 15-amps, 125-volts (14AWG), designed for use with all types of extension cords with Type-B plugs, and UL approved. Ideal for car, boat, marine, truck, trailer, pickup, RV, industrial and electrical applications.



01

Drill a 2" Hole



02

Insert AC Port Plug




03

Screw it on wall tightly



04

Connect Power

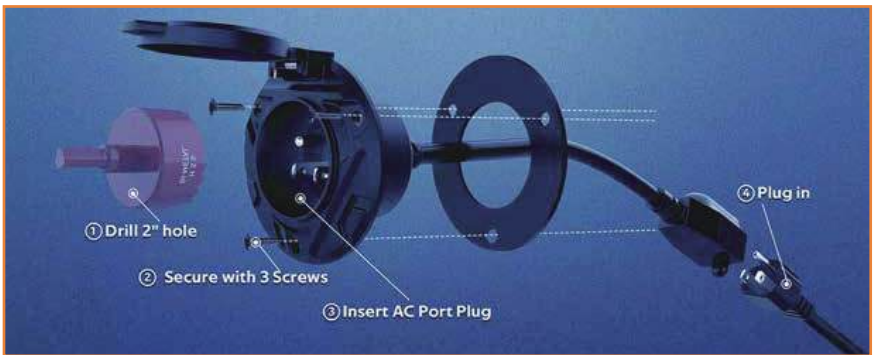

MRP CHARGER PRODUCT USER

OVERVIEW

This series of in-vehicle smart chargers can replenish the energy of the vehicle's power battery in the parking state, and the charging process is controlled by the charging program. Meet the automotive grade temperature resistance and vibration resistance requirements.

EXPANSION FUNCTION

- Maximum efficiency > 90%
- Wide temperature range for operation
- Strong protection function
- 100% full load aging test
- Automotive level vibration resistance level

PROTECTION FEATURES

- Output over voltage protection.
- Output over current protection.
- Output short-circuit protection.
- Output reverse protection.
- Charger over temperature protection.



THIS CHARGER CAN BE MOUNTED IN SEVERAL DIFFERENT CONFIGURATIONS:

Preferred mounting orientation

- Horizontally flat mounted with fan facing upwards with no obstruction
- Vertically mounted with AC/DC cords facing up or down
- Side mounted with AC/DC cords facing left or right

Non-Preferred Mounting Orientation

- Horizontally mounted with fan facing the ground

NOTE:

Always mount the charger to a noncombustible material surface (metal/ brick/concrete). When choosing an installation location, ensure there is space around the fan to provide sufficient cooling at minimum 3 inches.

PRECAUTIONS FOR USE

WARNING

- To reduce the risk of fire, install this battery charger on a surface of non-combustible material such as brick, concrete, or metal.
- To reduce the risk of electric shock disconnect charger from AC power after using.
- Risk of electric shock. Do not touch uninsulated portion of AC or DC connectors or uninsulated battery terminal.
- Ventilate the area when the battery is charging in an enclosed place, never smoke, use an open flame, or create sparks near the battery.
- The surface temperature is high during charging, please do not touch it.
- Only a qualified service technician should program or maintain the chargers.

DANGER

- A grounded outlet is required to reduce risk of electric shock. Charge only batteries of the same type, voltage, cell number, and amp hour capacities as shown on the label. Other types of batteries may burst causing personal injury and damage.
- Do not operate this charger if AC supply cord is damaged or if the charger has received a sharp blow or is damaged in any way.


COMMON FAULTS AND SOLUTIONS

If there is fault of charger, please handle according to the below table:

- Error input voltage: To check if the input voltage conformed to the requirement or not.
- Thin input wire line: To change the suitable input wire line.
- Machine over heat: Pay attention to ventilation at the working place of charger, covering anything on the charger is not allowed.
- Output short-circuit: To check the wire line of output terminal to exclude short-circuit.
- There is no battery or reverse battery: Check the battery connection, connect the battery correctly.
- Lower voltage of battery: to manage to make battery voltage be up to the starting voltage of charger.

- Battery over heat: Pay attention to ventilation; if there set outside temperature sensor, then stick it to the battery surface tightly.
(The temperature sensor of portable charger is inside of charger)
- Charger overheating: ensure that the charger vents and space remain unobstructed and away from the heat source.
Remark: The Company has the final explanation right for this instruction,if there is revision, no prior notice.

INDICATOR STATUS DESCRIPTION

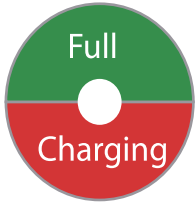INDICATOR LAMP TYPE	
Electric quantity indication	<p>Red light always on: <80%</p> <p>Green light flashing: >80%</p> <p>Green light always on: 100%</p>
Electric quantity indication	<p>Red-Green light alternation: uncharged state</p>

NOTE:

Please check the corresponding indicator type according to the light mark on the product body.

 www.cloudnewenergy.com

 info@cloudnewenergy.com